


ASSEMBLY INSTRUCTIONS FOR YOUR

WONTON WALL SWINGER


CORD COVER

ASSEMBLY INSTRUCTIONS

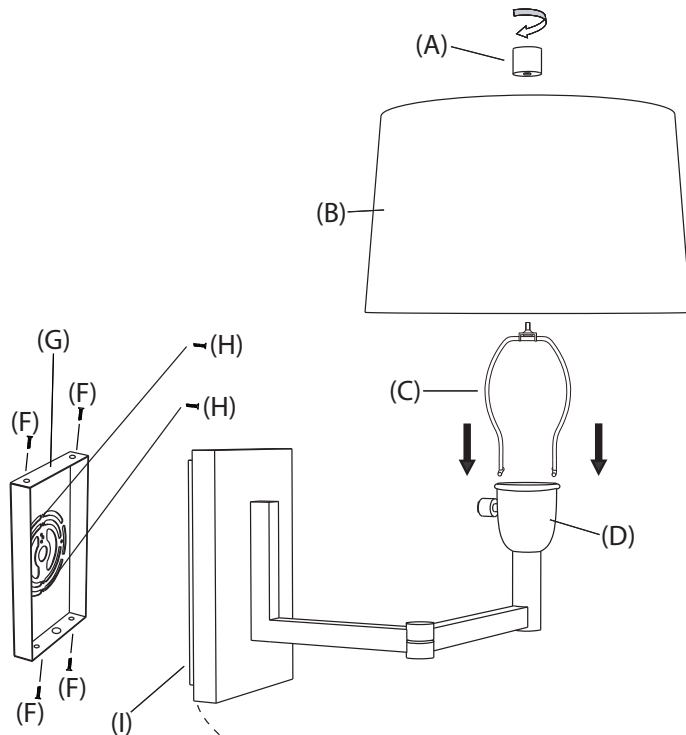

1. Remove the mounting plate (G) from the base of the lighting fixture (I) by removing the base screws (F).
2. Affix the mounting plate (G) to the wall with the mounting plate screws (H) provided.
3. Attach fixture (I) to the mounting plate (G) and secure with screws (F).
4. Attach cord cover (E) to bottom of light base (I) by turning (E) in counter-clockwise direction.
5. Put harp (C) into harp saddle cup (D) by squeezing both sides of the harp inward and affixing to the top section of (D).
6. Remove the finial (A) from harp (C) and attach shade (B) to harp (C). Secure shade (B) to harp (C) with finial (A).
7. Insert light bulb Type A, maximum 100 watts into socket.
8. Plug lamp cord into wall outlet.

DIRECT WIRE ASSEMBLY INSTRUCTIONS

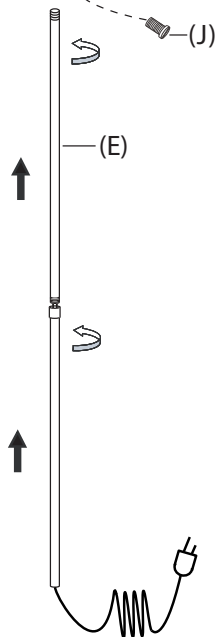

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Remove the mounting plate (G) from the base of the lighting fixture (I) by removing the base screws (F).
3. Cut the polarized plug from the end of electric cord and remove the cord cover (if attached).
4. From the backside of the lamp, pull the electric cord up through the exit hole at the bottom of the backplate.
5. Take the screw plug (J) and attach to the base (I) into the hole vacated by the cord.
6. Gently pull the wiring from the wall outlet box and allow the wires to hang. Thread the wires through the center hole in the mounting plate (G).
7. Affix the mounting plate (G) to the wall outlet box with the mounting plate screws (H) provided.
8. Connect the copper wire from fixture to ground.
9. Connect rough side of wire from fixture to white wire.
10. Connect smooth side of wire from fixture to black wire.
11. Attach fixture (I) to the mounting plate (G). Secure fixture (I) to the mounting plate (G) with base screws (F).
12. Follow steps 5 - 7 in cord cover assembly instructions above for completion of assembly .